

973 ACCESSORIES

SWITCH SELECTOR ACCESSORY DEVICE MAINS

Code : **9730021**

Model : **ASC-050**

Description

Accessorie for Door Entry System installations. Selector switch accessory activated by means of electronic call, buzzer call or external signal.

Application: activation by the call, auxiliary pushbutton, etc. of devices connected to the mains (lights, sirens, etc.)

