

973 ACCESSORIES

SWITCH SELECTOR ACCESSORY



Code: 9730023

Model: ASC-001

Description

Accessorie for Door Entry System installations. Switch selector accessory activated by means of external control signal. Applications: seeing images from a second camera, activating a second electric lock by means of an auxiliary button, etc